

Associated Manuals

For detailed explanation of FX Configurator-FP Configuration Software, refer to this manual.
For the hardware information and instruction on the PLC main unit, other special function unit/block, etc., refer to its respective manual.

For acquiring required manuals, contact the distributor from who you have purchased the product.

- ⊙ Refer to these manuals
- Refer to the manual required depending on the equipment used
- △ For detail explanation, refer to an additional manual

		Title of manual	Document number	Description	Model code
Manual for the Main Module					
FX3U Series PLCs Main Unit					
△	Supplied Manual	FX3U Series Hardware Manual	JY997D18801	Describes the FX3U Series PLC specifications for I/O, wiring and installation extracted from the FX3U User's Manual - Hardware Edition. For details, refer to FX3U Series User's Manual - Hardware Edition.	-
⊙	Additional Manual	FX3U Series User's Manual - Hardware Edition	JY997D16501	Describes the FX3U Series PLC specifications for I/O, wiring, installation and maintenance.	09R516
FX3UC Series PLCs Main Unit					
△	Supplied Manual	FX3UC-32MT-LT Hardware Manual (Japanese Only)	JY997D12701	Describes the FX3UC-32MT-LT PLC specifications for I/O, wiring and installation extracted from the FX3UC User's Manual - Hardware Edition. For details, refer to the FX3UC Series User's Manual - Hardware Edition (Japanese Only).	-
△	Supplied Manual	FX3UC-32MT-LT-2 Hardware Manual	JY997D31601	I/O specifications, wiring and installation of the PLC main unit FX3UC-32MT-LT-2 extracted from the FX3UC Series User's Manual - Hardware Edition. For detailed explanation, refer to the FX3UC Series User's Manual - Hardware Edition.	-
△	Supplied Manual	FX3UC (D, DS, DSS) Series Hardware Manual	JY997D28601	Describes the FX3UC-(D, DS, DSS) Series PLC specifications for I/O, wiring and installation extracted from the FX3UC User's Manual - Hardware Edition. For details, refer to the FX3UC Series User's Manual - Hardware Edition.	-
⊙	Additional Manual	FX3UC Series User's Manual - Hardware Edition	JY997D28701	Describes the FX3UC Series PLC specifications for I/O, wiring, installation and maintenance.	09R519
Programming for FX3U/FX3UC Series					
⊙	Additional Manual	FX3G / FX3U / FX3UC Series Programmin Manual - Basic & Applied Instruction Edition	JY997D16601	Describes FX3G / FX3U / FX3UC Series PLC programming for basic/ applied instructions and devices.	09R517
Manuals for FX3U-20SSC-H Positioning Block					
△	Supplied Manual	FX3U-20SSC-H Installation Manual	JY997D21101	Describes the FX3U-20SSC-H positioning block specifications for I/O, power supply extracted from the FX3U-20SSC-H User's Manual. For details, refer to the FX3U-20SSC-H User's Manual.	-
⊙	Additional Manual	FX3U-20SSC-H User's Manual	JY997D21301	Describes the FX3U-20SSC-H Positioning block specifications.	09R622
⊙	Supplied Manual	FX Configurator-FP Operation Manual	JY997D21801	Describes the FX Configurator-FP Setting/Monitoring Tool operation details.	09R916