

Reading of the Manual

Shows the manual title.

This area shows the manual title for the page currently opened.

Shows the title of the chapter and the title of the section.

This area shows the title of the chapter and the title of the section for the page currently opened.

Indexes the chapter number.

The right side of each page indexes the chapter number for the page currently opened.

FX Configurator-FP Operation Manual

9 Print
9.2 Printing

9.2 Printing

9.2.1 setting the item to print

Printing the positioning parameters, servo parameters and table information.

1 Follow any of the procedures below.

- Click [Print].
- Select [File] → [Print].

The [Print] dialog box appears.

2 Set the item to print.

[Print] dialog box has [Item specification], [Servo parameters] and [table information] tabs. Click the tab to set. For [Servo parameters] and [table information] tabs, refer to the following pages.

1. [Item specification] tab

Print

Item specification
Servo parameters
Table information

Axis specification:

All axis

Axis specification

X-axis

Y-axis

XY-axis

Print data:

All item

Item specification

Positioning parameters

Servo parameters

Table information

Item	Description
Axis specification	Specifies the axis data to print
All axis	Prints X, Y and XY-axis data
Axis specification	Prints the ticked axis data <ul style="list-style-type: none"> • X-axis • Y-axis • XY-axis
Print data	Specifies the data type to print
All item	Prints [Positioning parameters], [Servo parameters] and [Table information]
Item specification	Prints the ticked data item <ul style="list-style-type: none"> • Positioning parameters • Servo parameters • Table information
<Printer setting>	Displays [Printer setting] dialog box
<Print>	Outputs to printer depending on the specified contents
<Print preview>	Displays the print preview
<Close>	Closes the dialog box without printing

81

1 Introduction

2 Initial Setup

3 Window and Operation

4 Creating Files

5 Data set

6 Setting One Description

7 Data New Procedure

8 Changing Data for Printing

9 Print

10 Edit Function

1→2→3 . . .

Indicates the procedure steps. This manual differentiates the menu and items with parentheses

[] : Refers to the options in the menu bars, dialog box items or FX Configurator-FP utility menu.

< > : Refers to the dialog box buttons or the PC keyboard.

Shows the reference.

The mark of " → " is expressing the reference destination and the reference manual.

The above diagram differs from the actual page, as it is provided for explanation only.